
FEED WHEEL TENSIONER

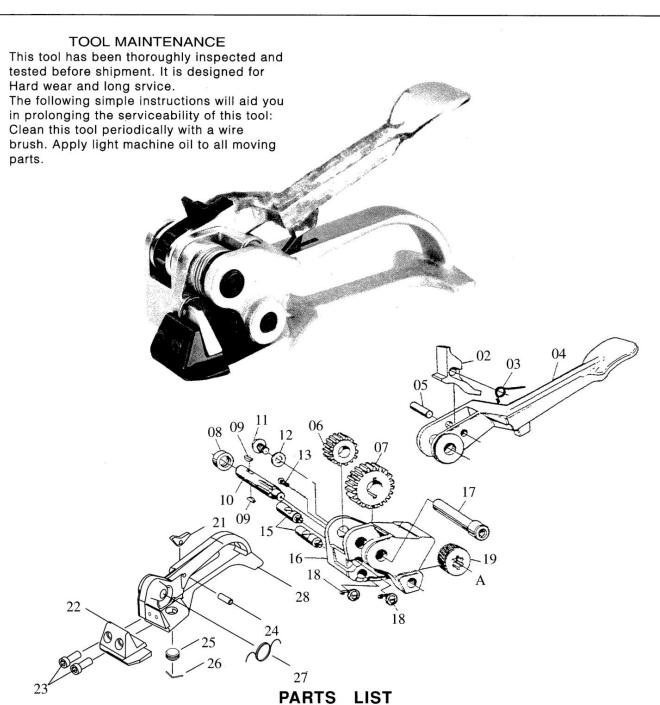

PART NO.	DESCRIPTION	Q'TY/TOOL	PART NO.	DESCRIPTION	Q'TY/TOOL
2	Handle Pawl	1	15	Holding Pawl	2
3	Handle Pawl Spring	1	16	Gear Housing	1
4	Handle	1	17	Pivot Pin	1
5	Handle Pawl Pin	1	18	Holding Pawl Spring	2
6	Pinion Gear	1	19	Feedwheel	1
7	Tension Gear	1	21	Lift Arm	1
8 9	Bushing	1	22	Breaker Nose	1
9	Woodruff Key	2	23	Screw M5x14	2
10	Feedwheel Shaft	1	24	Roll Pin	1
11	Screw M6x10	1	25	Clutch Plug	1
12	Washer	1	26	Plug Pin	1
13	Screw M5x10	1	27	Base Spring	1
			28	Base	1

WHEN ORDERING PARTS, PLEASE SHOW TOOL MODEL, PART NUMBER AND NAME.