


FEED WHEEL TENSIONER

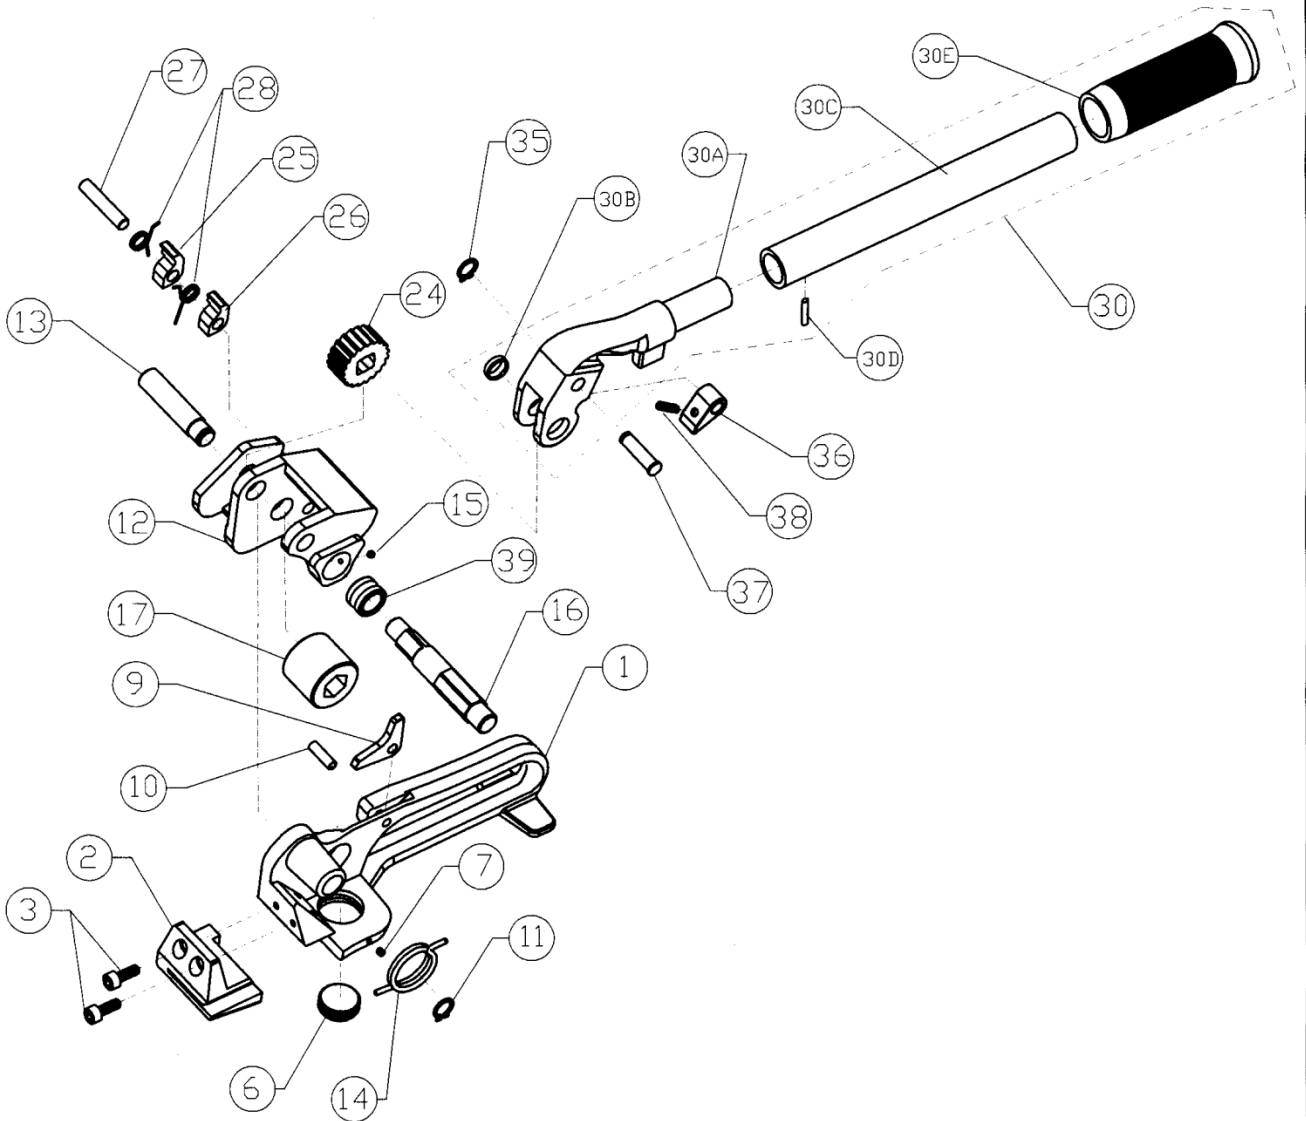

PARTS LIST

Part no.	Part Name	Qty./Tool	Part no.	Part Name	Qty./Tool
#1	Base	1	#17	Feedwheel	1
#2	Breaker Nose	1	#24	Ratchet Gear	1
#3	Screw M6x16	2	#25	Long Pawl	1
#6	Clutch Plug	1	#26	Short Pawl	1
#7	Set Screw M6x8	1	#27	Retaining Pawl Pin	1
#9	Lift Lever	1	#28	Retaining Support Spring	2
#10	Roll Pin	1	#30	Handle	1
#11	Retaining Ring	1	#35	Retaining Ring	1
#12	Gear Housing	1	#36	Handle Pawl	1
#13	Pivot Pin	1	#37	Crosshead Pin	1
#14	Base Spring	1	#38	Spring	1
#15	Set Screw M4x6	1	#39	Bushing	1
#16	Feedwheel Shaft	1			

Keep tool well oiled and clean. Please order parts by number and name.