



S260 BANDIT TOOL INSTRUCTION

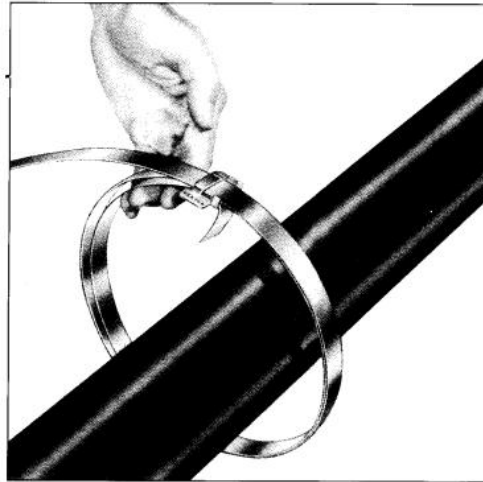


1 Band may be used from bulk roll as this *completely eliminates waste of band*. Slide buckle on band as shown, bringing end of band around object to be clamped and again through buckle.




2 Continue band around object once more and again through buckle. *Double banding develops a great deal more radial compression than single banding*. Bend end of band under buckle.

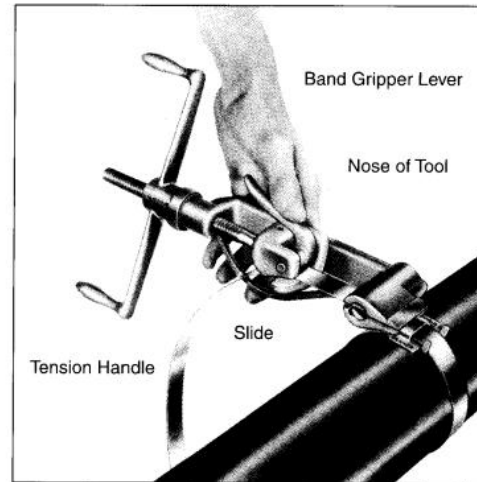


3 Place band in open slot of tool nose and in slide. With thumb on band gripper lever, apply tension by turning handle of tool. After tension is created, it is no longer necessary to hold band gripper lever as it locks itself under tension.

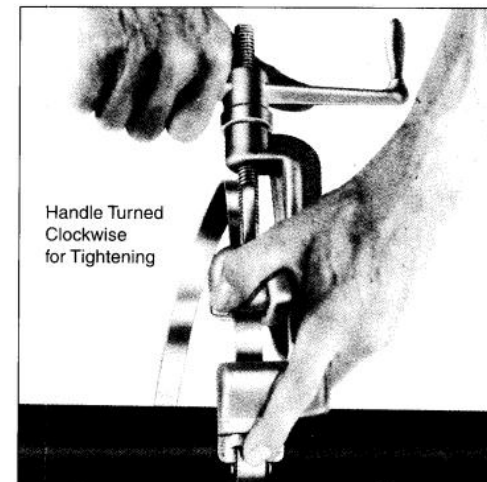


4 Place finger on the band at buckle bridge while tensioning with tool handle. When you feel the band stop moving through buckle as you are turning handle, *maximum pressure is being exerted by the band* around object being clamped. *Stop turning handle*.

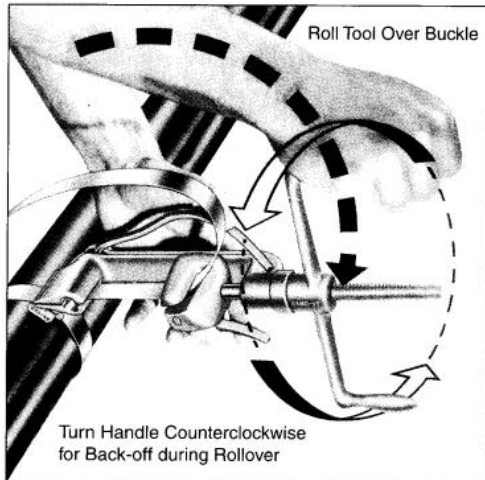

5 Roll tool over buckle, backing off with tension handle throughout entire rolling operation. Failure to back off with tension handle throughout entire course of roll may result in breaking of band. There is no loss of tension as band released is used up in the band.

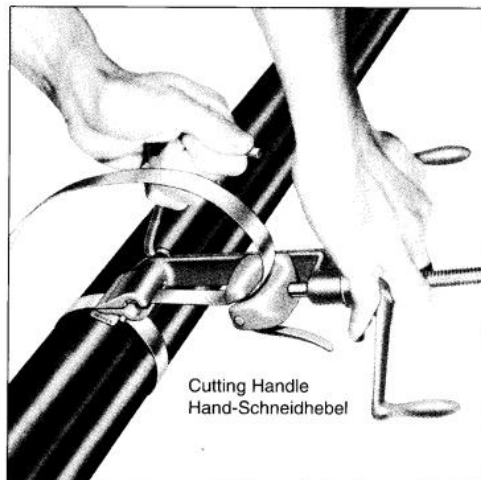

6 Pull cutting handle to cut the band.

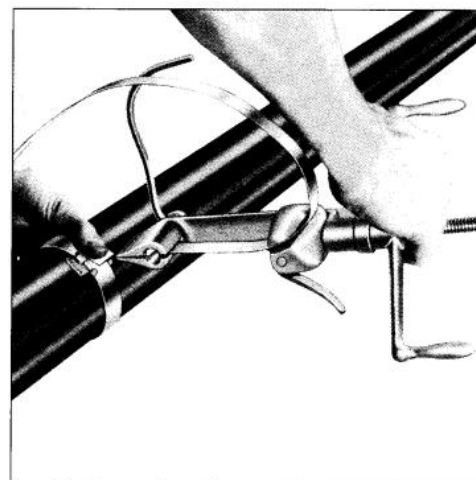

7 Remove tool, holding stub of band down with thumb.



8 Clinch stub by hammering down buckle ears, completing the clamp.